

Field Services



We'll take it from here!

FIELD CREW VIEWS



Triple-Bead 90™ being applied as a transition on a Cone Section lined with WC90™ Weldable Ceramic.

Field Services

WC90™ Weldable Ceramic being installed in a cone.

Field Services

Installing SHC800™ Panels.

FIELD SERVICES

Densit® WearFlex™ 2000
being installed in a Classifier Cone.

Field Services

Expanded metal mesh being welded into place
in a Drag Conveyor to be lined with Basalt Tile.

Field Services

WC90™ Weldable Ceramic Tiles installed in an Exhauster Fan.

Field Services



PGP100™ Black UHMW lined Coal Chute.

Field Services



Classifier Cone being lined with
Densit® WearFlex™ 2000.

FIELD SERVICES



WC90™ HexTile Ceramic lined Spool.

Field Services

Triple-Bead 90™ Wear Compound
being used to repair Hopper.

Field Services



Densit® WearFlex™ 2000 being installed.

Field Services


Chute lined with Zirconium Ceramic Tile.



Field Services

Chute being lined with
WC90™ Weldable Ceramic Tiles.

FIELD SERVICES

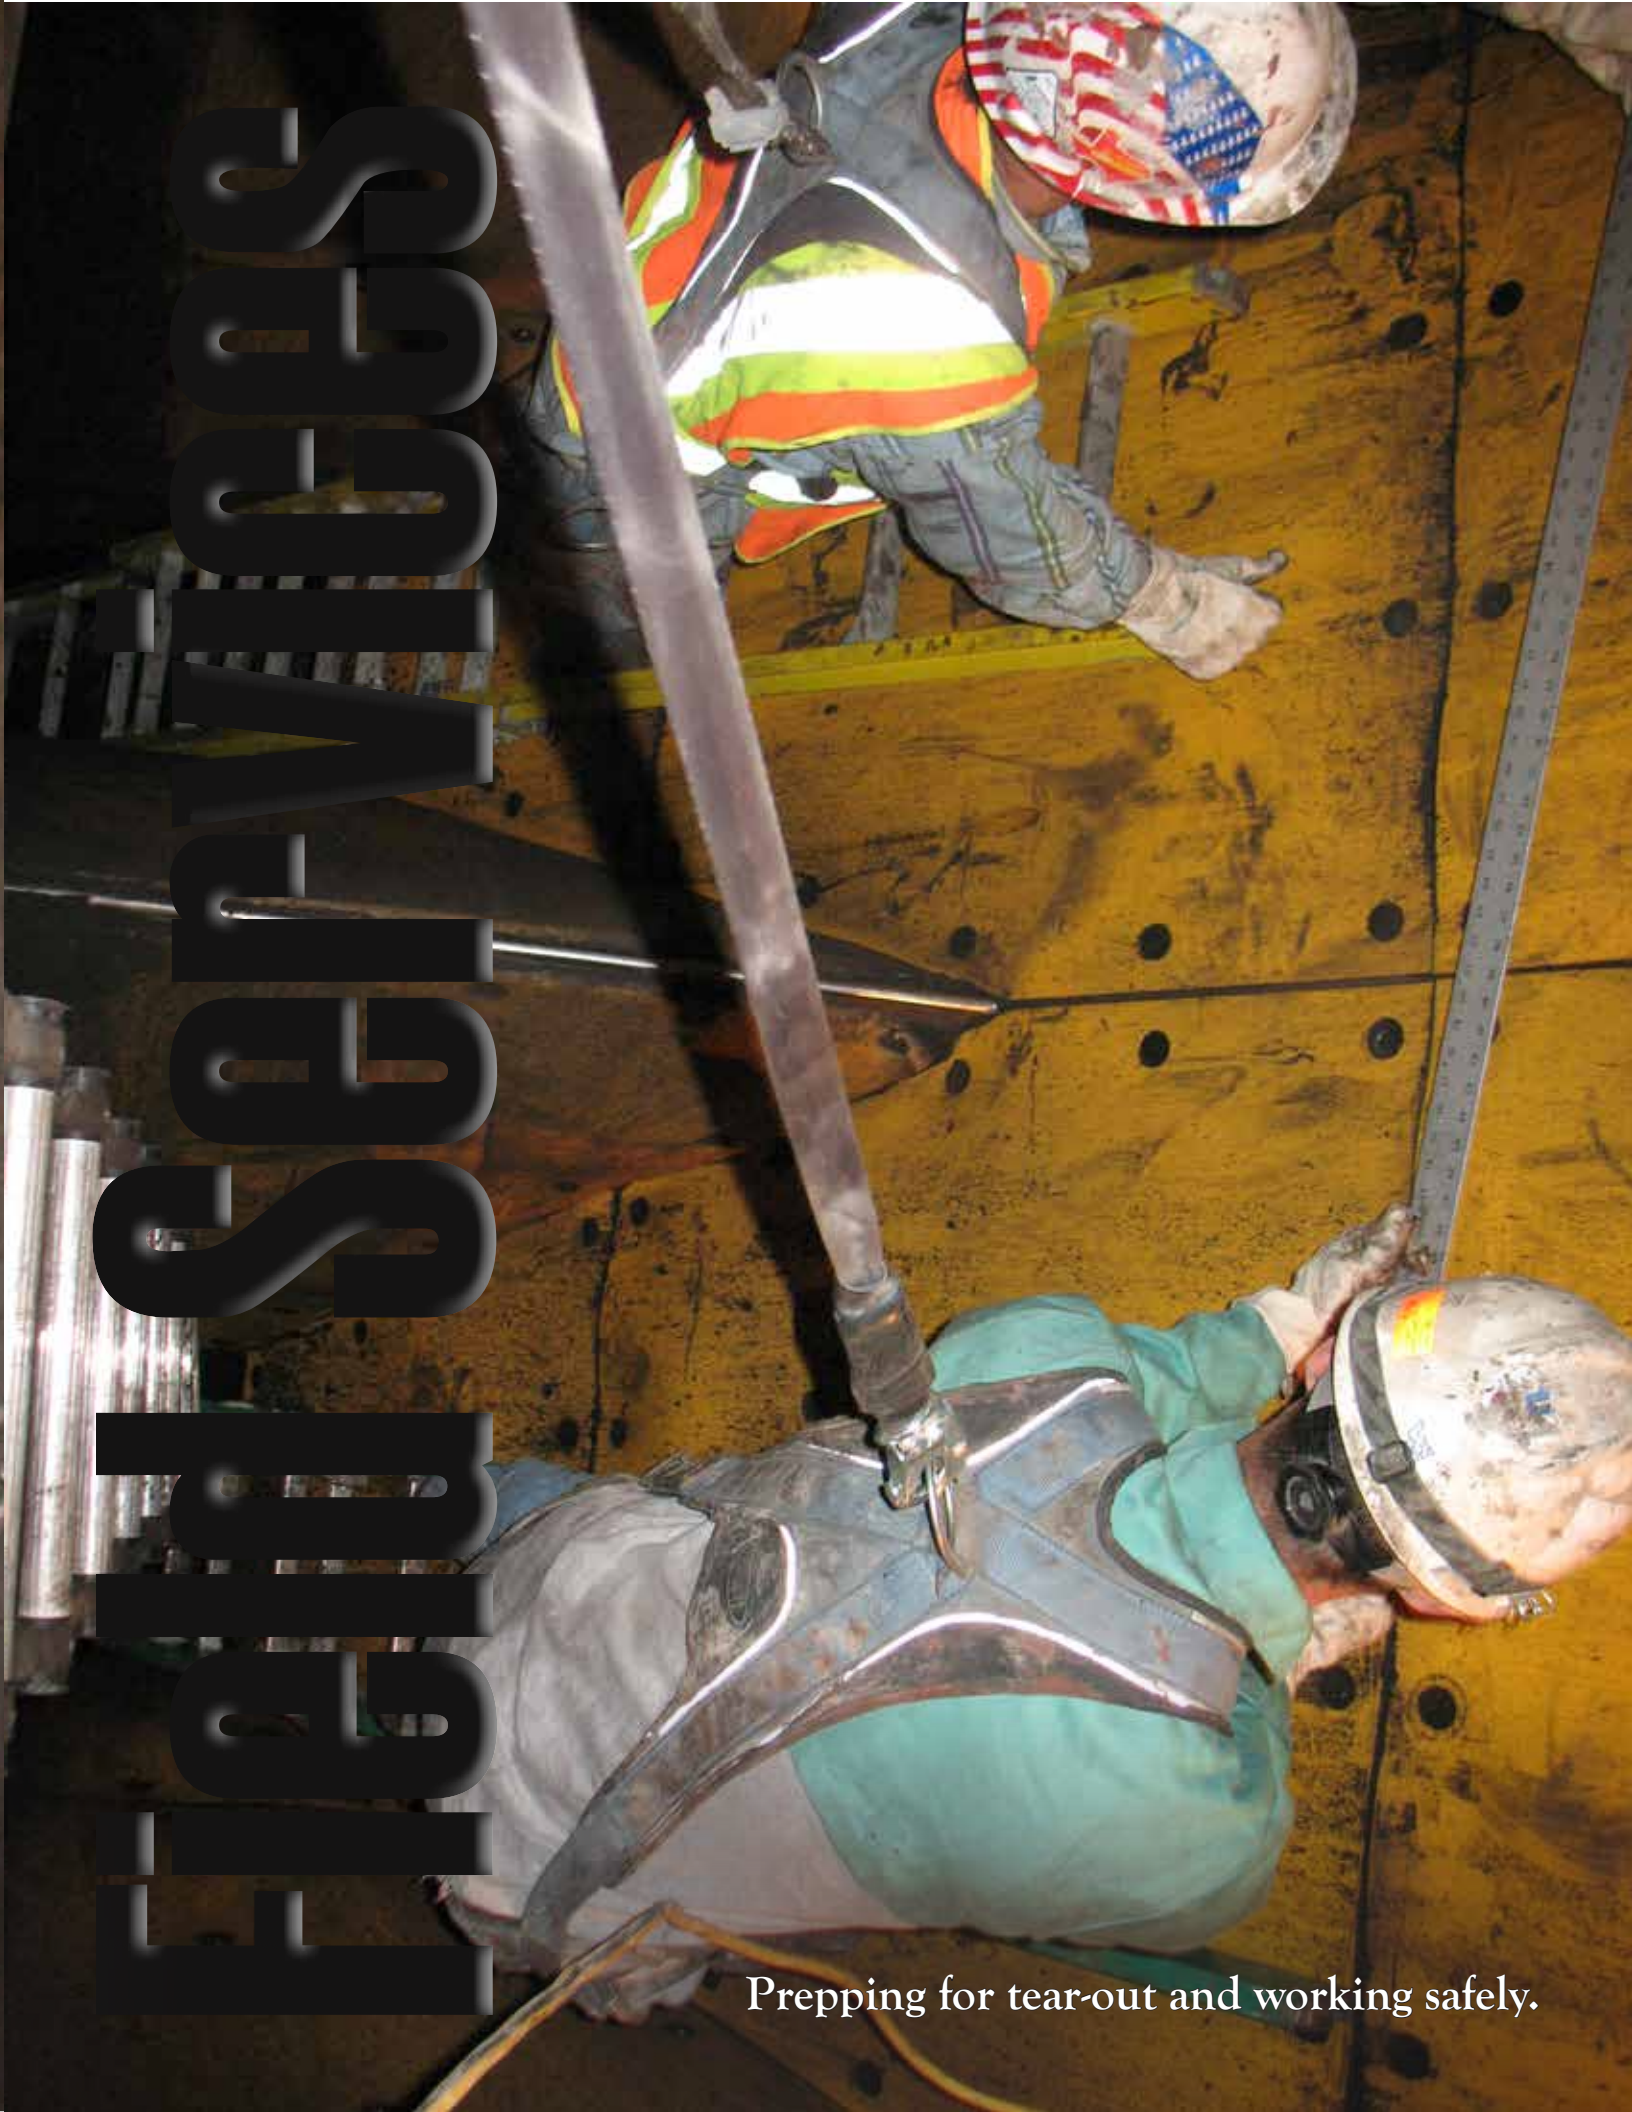

Prepping for tear-out and working safely.

FIELD SERVICES

Densit® WearFlex™ 2000 being installed in the upper section of a Cyclone.

Field Services

Making the right choices and working safely.