

# Hot Spot



Hand plasma cutting.

# FAST EASY SAFE



Bolting Chute components together.

# WCS

WCS90™ Plain Ceramic Tile being installed in Chute.



# FAST STRO

Tripper Chute sections staged to be shipped.

# STOPS



Chipp'n the tile.



# Final Step



Tripper Chutes getting final torque.

# FAST TO SIT



**WC90™** Weldable Ceramic Tile being installed in a Square to Round Transition.

# 3 1 0 1 5



Full production of Chutes.



W  
C  
9  
0  
S



**WC90™** Plain Ceramic installed  
in Tripper Chute sections.

# STAIR



Tripper Chute sections staged to be shipped.

# Welding



Grinding for precise fit on Chute components.

# FAST




*Tripper Chute fit is critical.*

# TRIPPER



*Tripper Chutes inspected and ready for paint.*

# 13 11 10 11 12 13



10 ton overhead crane makes  
light work of steel plates.

# FOR S

Cone with **WC90™** Weldable Ceramic Tiles installed.

# LEASING



Plasma cutting table hard at it.



# FAST ROAD S



WC90™ Plain Ceramic Tiles installed in Chute walls.

# Shop



Completed **WC90™** Weldable Ceramic Tile lined Elbows staged for shipping.

# STURDIFLEX




Densit® WearFlex™ 2000 being trowled into mesh on large Chute job.

# FAST FOR S



Hand plasma cutting.

# FAST ROADS

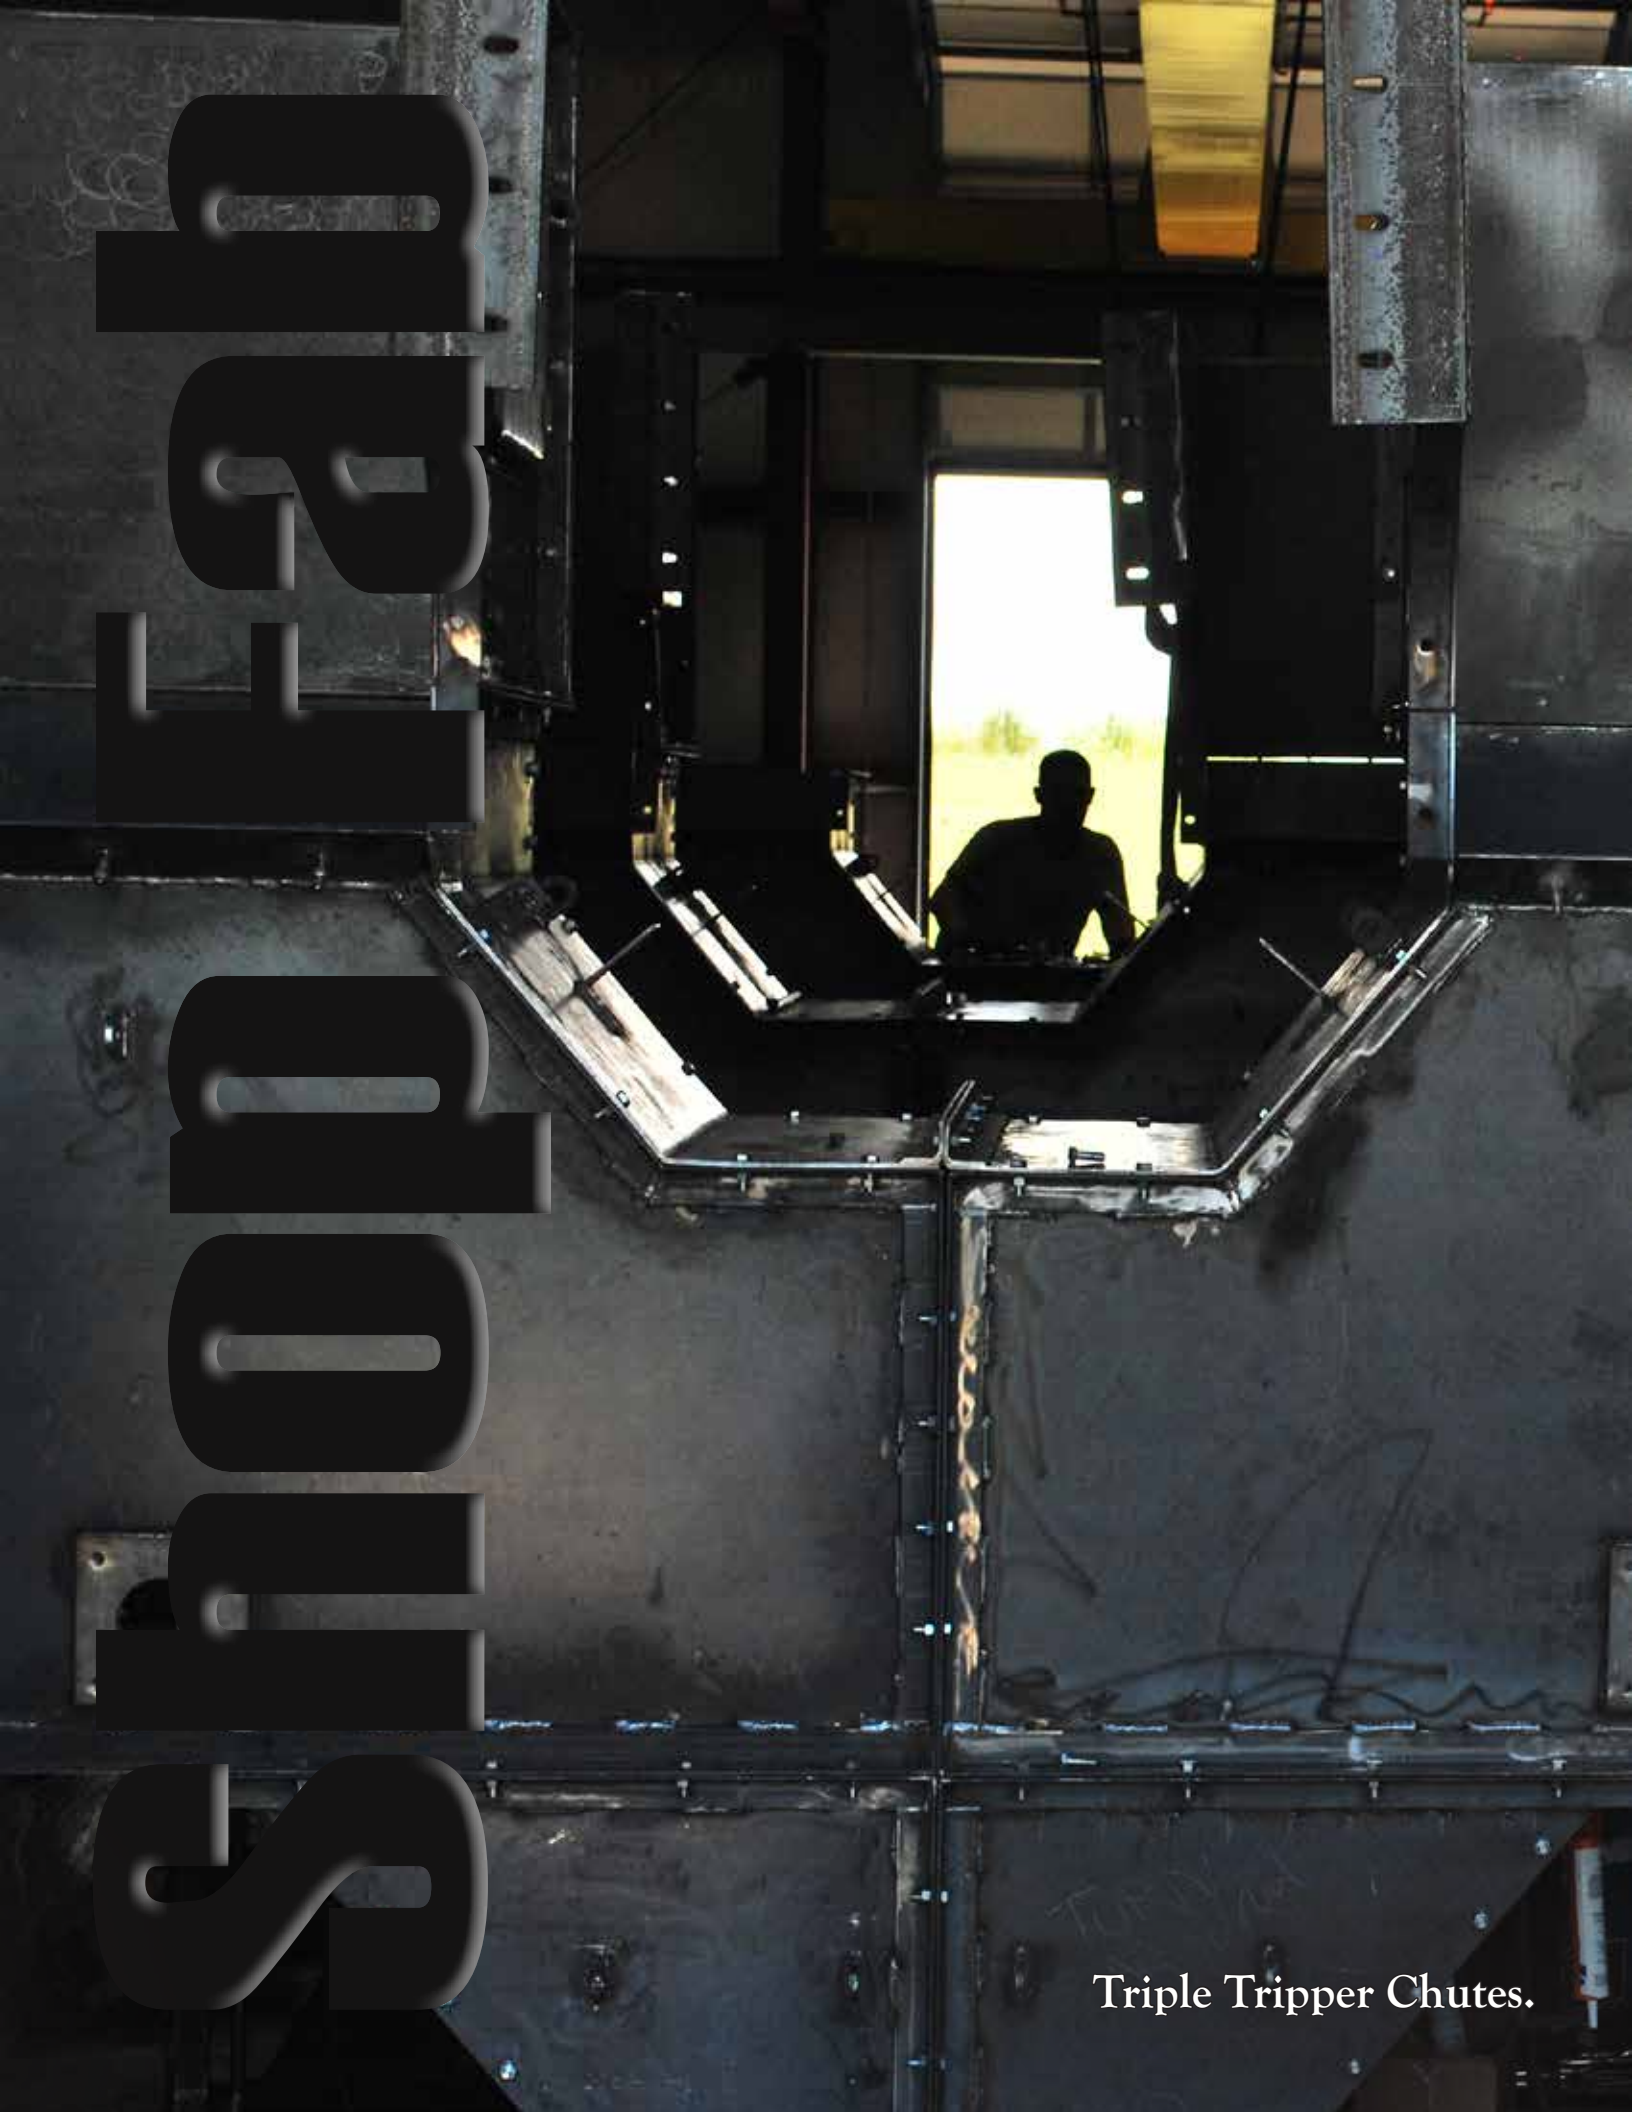

Triple Tripper Chutes.